


# Technical Guide:

## Removing a Lockout

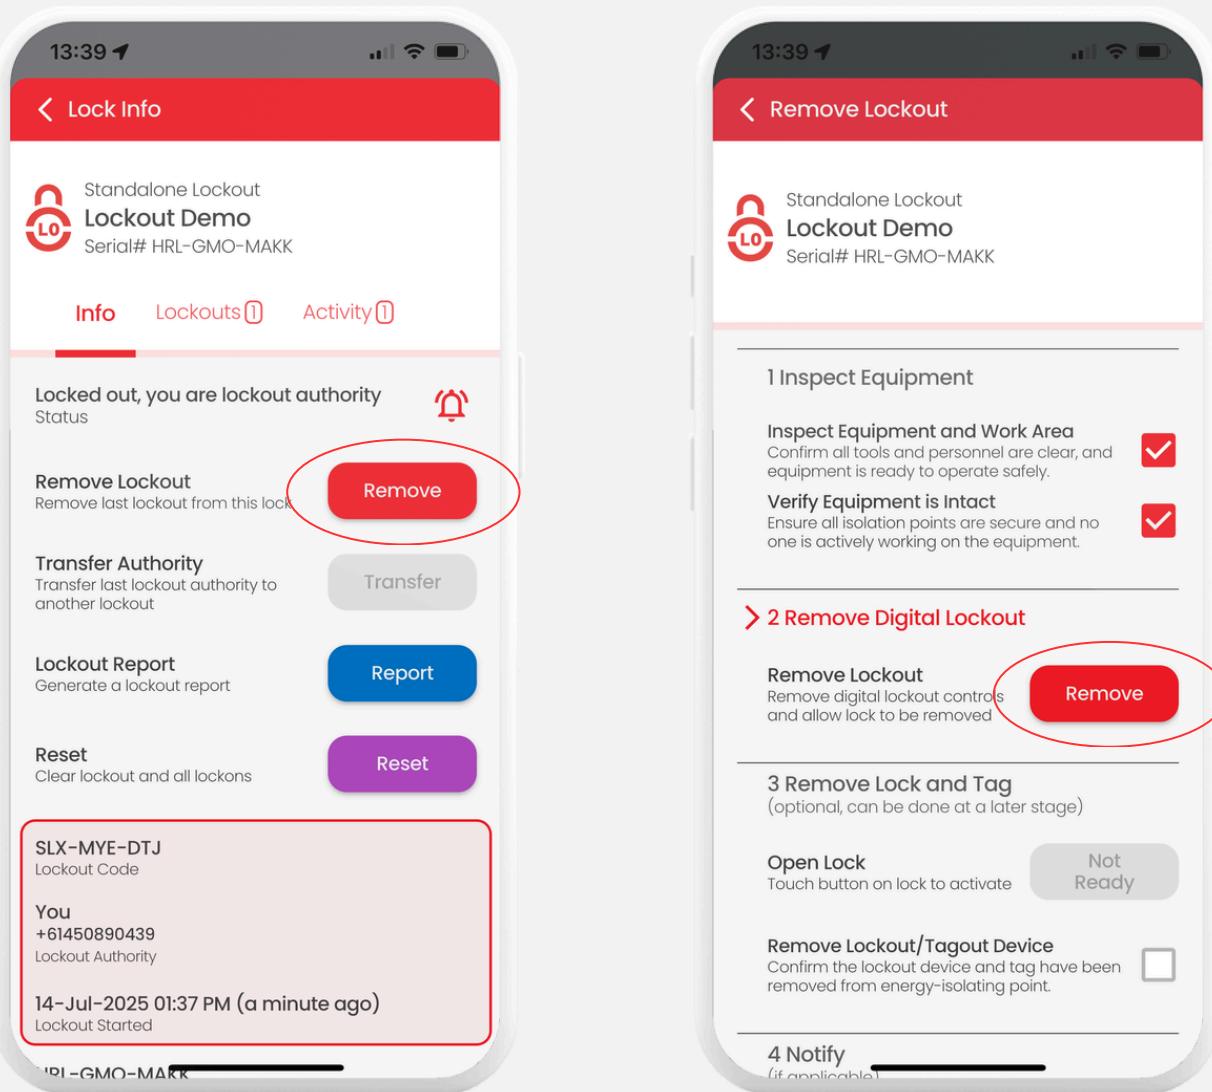

**Step 1:** Navigate to the Lock Info screen, on the Lock Info screen select 'Remove'.

**Step 2:** Complete the Remove Lockout checklist and select 'Remove'.