 
 


Technical Guide: Changing the Battery

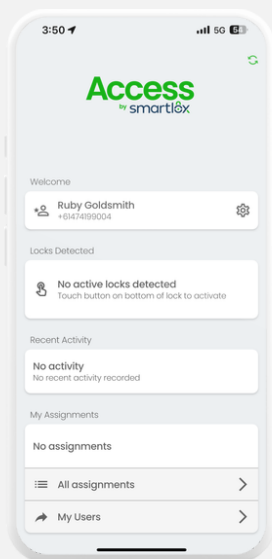


Step 1: On the home screen, select the settings cog next to your name. On the Settings page, select Advanced.

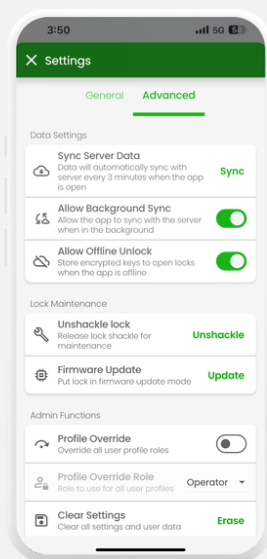

Step 2: Under Lock Maintenance, select Unshackle. This will open the Unshackle Lock screen—follow the steps to unshackle.




Step 3: Insert a 1/8 Allen key and remove the screw.

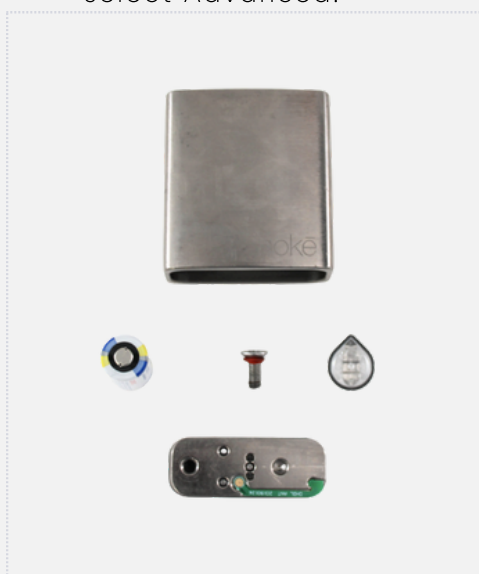

Step 4: Remove the base cover and replace the battery.



Step 5: Refit the base and install the screw.

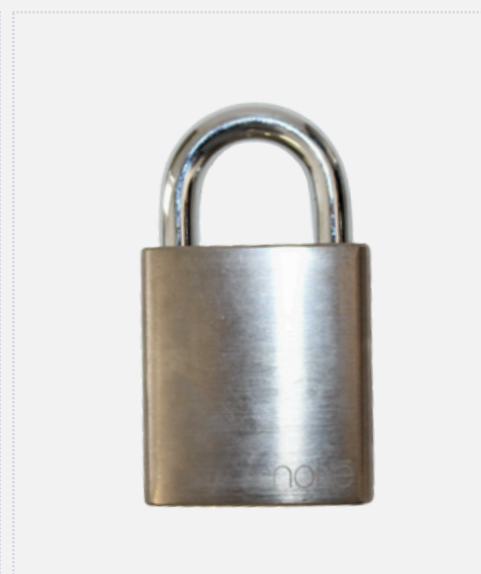

Step 3: Reinstall the shackle.

Note: Reinstalling the shackle will secure the lock and register it as locked.